
## **Conductive Primer**

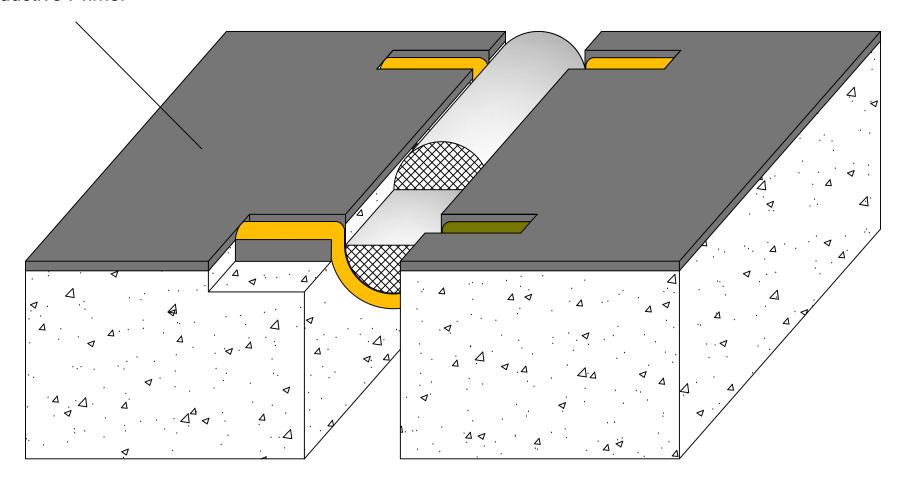

#### Note:

- -Bridging Wire pushed into wet primer
- -Backer Rod put in place over wire to prevent damage when cutting joints
- -2 Wire Connections 2" apart to ensure conductivity
- -View shows floor before overlayment is applied

## **Architectural Detail**

#### **Joint Treatment**

Electrical Joint Bridging - Top View

# STONHARD 1000 East Park Avenue

/laple Shade		New J	New Jersey 08052	
	D-1	Daniel de la company		

Scale: Drawn by: 06/22/2011 ESD.004 KMB